


UW50 WAREWASHING

To Operate:

- 1 Place strainer pan and scrap basket into position in the dishwasher tank.
- 2 Close the access door (automatically closes drains).
- 3 Turn selector switch to **FILL** and press start.
- 4 Open door to reset and load utensils on rack as necessary, slide rack into machine and close the door.
- 5 Change selector to desired wash cycle length (2, 4, or 6 minutes).
- 6 Press **START**.

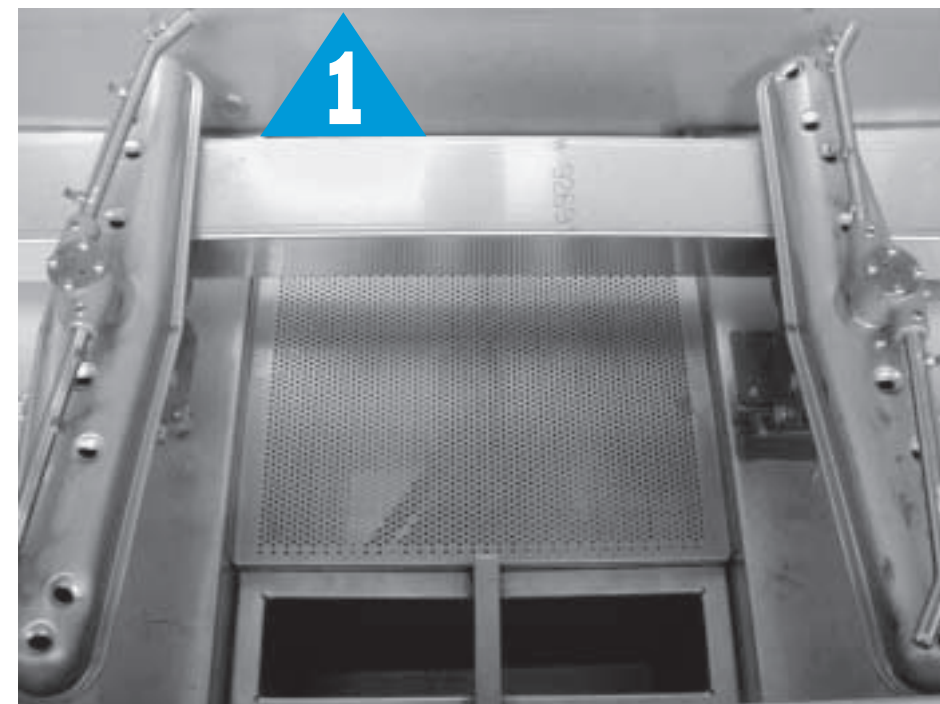

To Stop:

- 1 Open machine door.
- 2 Turn selector to **OFF** position.





Operational Tips:

- 1 After placing wash and rinse arms back in the machine, verify they all spin freely prior to operating the unit.
- 2 Delime the machine on a regular basis. This assures proper function of the machine.

Note: Refer to "Troubleshooting" section of your UW50 Instruction Manual or call your local Hobart Sales/Service office if you experience any difficulties.

To Clean:

- 1 Turn selector to **OFF** position.
- 2 Open machine door.
- 3 Lift drain lever inside door opening.
- 4 Remove and clean strainer pan and strainer basket.
- 5 Spray down machine interior.
- 6 Visually inspect top and bottom wash and rinse arms, if obstructed remove arms and spray free with water.
- 7 Remove overflow tube and wash thoroughly.
- 8 Inspect tank interior, remove any soil from heater, probes, and floats
- 9 Wipe down exterior with a wet wash rag.
DO NOT SPRAY THE EXTERIOR WITH A HOSE
- 10 Reassemble the machine:
 - a. Install scrap screen and basket
 - b. Install wash and rinse arms if removed

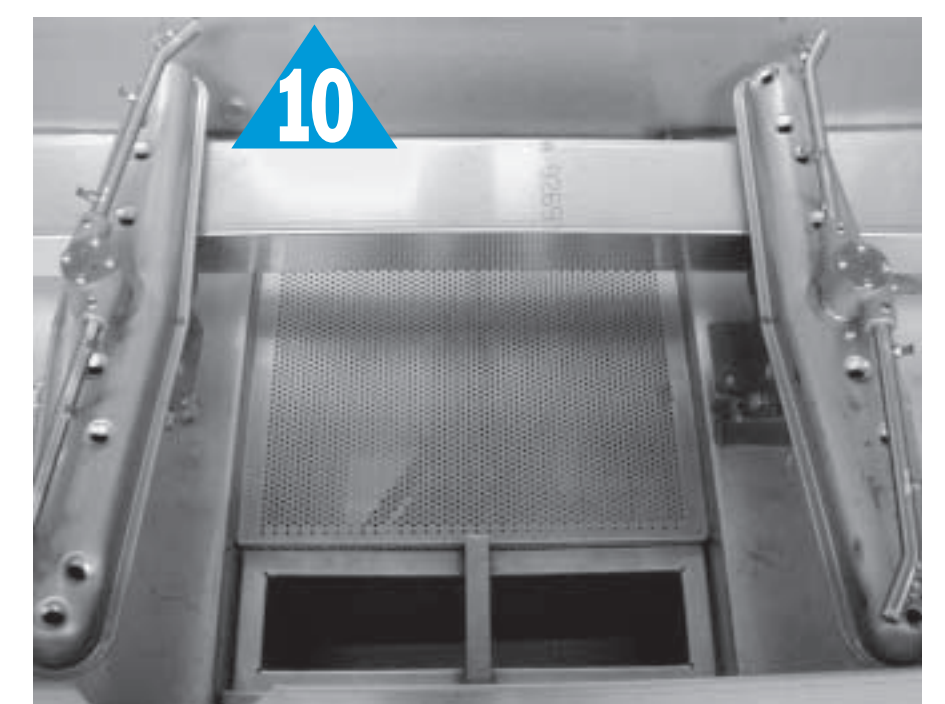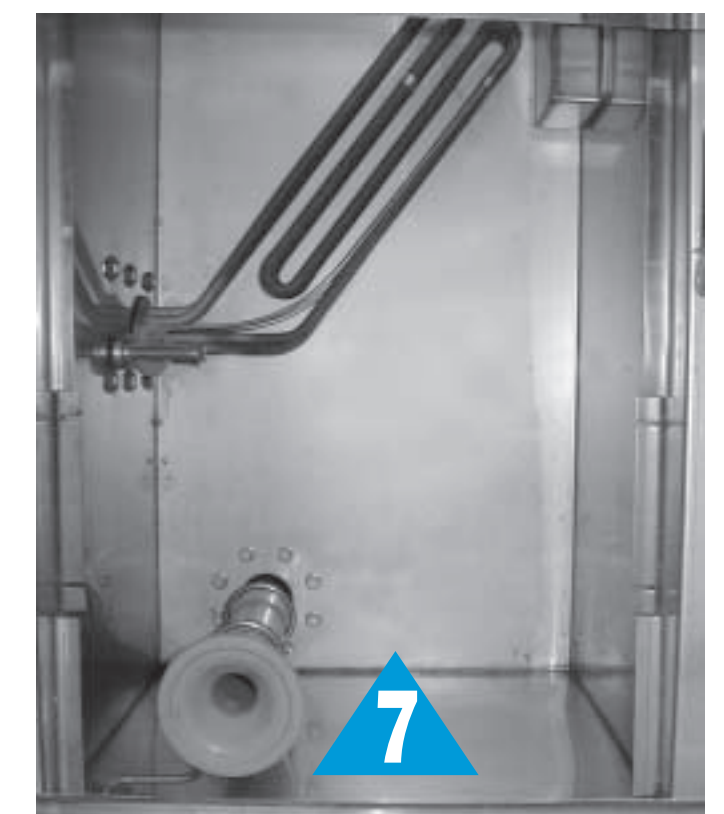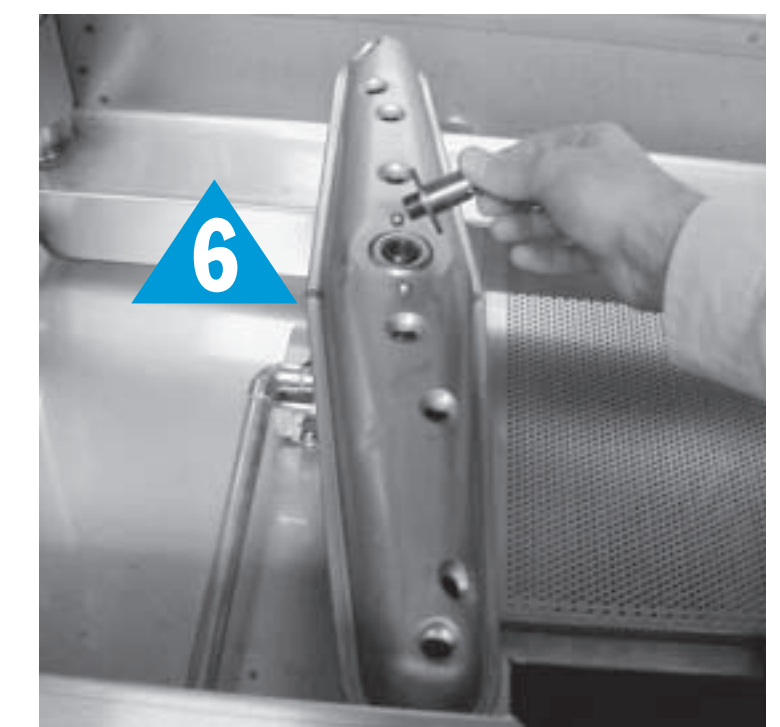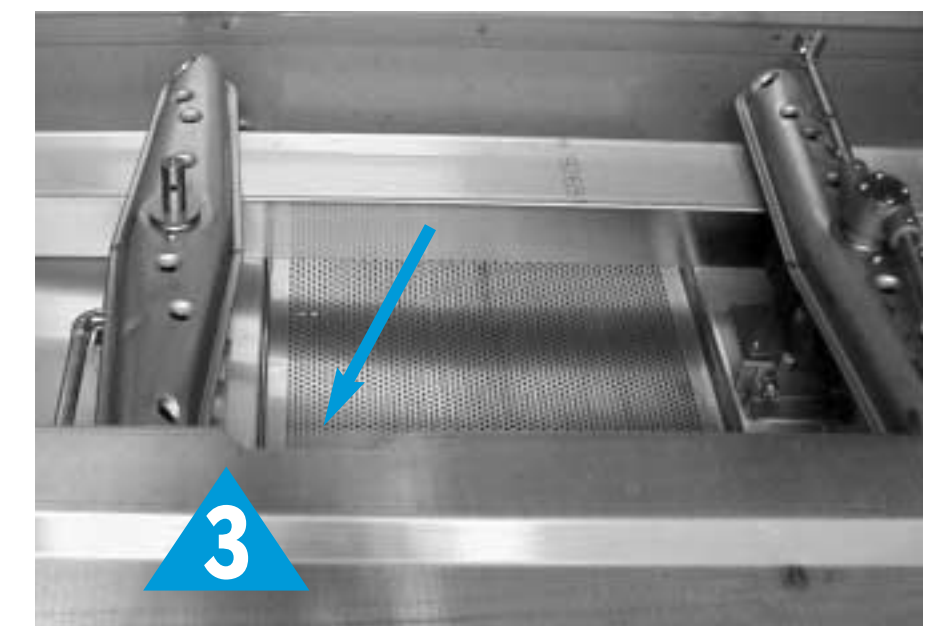

Leave door open at end of day to allow interior to air out.



Hobart Corporation, 701 S. Ridge Avenue, Troy, OH 45374-0001
Phone: (937) 332-3000 www.hobartcorp.com